



QUADIVATOR INC

Box 218, Portage La Prairie, MB R1N 3C5 Canada **Web: www.quadivator.com**
Phone: (866) 770-2169 **Fax: (204) 239-4271** **Email: mailbox@quadivator.com**

Lawn Aerator

- 1) Remove the back row of shank assemblies from the Quadivator.
- 2) Install the support arms of the lawn aerator by sliding them over the stub shafts located on the sides of the aerator and tightening them in place with the bearing locking collar and allen screw.
- 3) Flip the harrows over into their transport position.
- 4) Slide the roller support arm collars over the ends of the rear toolbar of the Quadivator.
- 5) Tighten the jam nuts of the support arm collars.

Helpful hints:

- a) Install the lawn aerator to the Quadivator before you hook your Quadivator to your garden tractor or ATV.
- b) Do not try to lift the aerator. This may cause serious damage to the electric actuator.
- c) Fill the aerator with water for extra weight to get better penetration through the lawn and into the ground.

