



QUADIVATOR INC

Box 218, Portage La Prairie, MB R1N 3C5 Canada Web: www.quadivator.com
Phone: (866) 770-2169 Fax: (204) 239-4271 Email: mailbox@quadivator.com

Lawn Roller

- 1) Remove the back row of shank assemblies from the Quadivator.
- 2) Install the support arms of the lawn roller by sliding them over the stub shafts located on the sides of the roller and tightening them in place with the bearing locking collar and allan screw.
- 3) Flip the harrows over into their transport position.
- 4) Slide the roller support arm collars over the ends of the rear toolbar of the Quadivator.
- 5) Tighten the jam nuts of the support arm collars.

Helpful hints:

- a) Install the lawn roller to the Quadivator before you hook your Quadivator to your garden tractor or ATV.
- b) Do not try to lift the roller. This may cause serious damage to the electric actuator.
- c) Fill the roller with water for extra weight, if needed.

